




TRUXARMOR
ENGINEERED TO ENDURE

INSTALLATION GUIDE

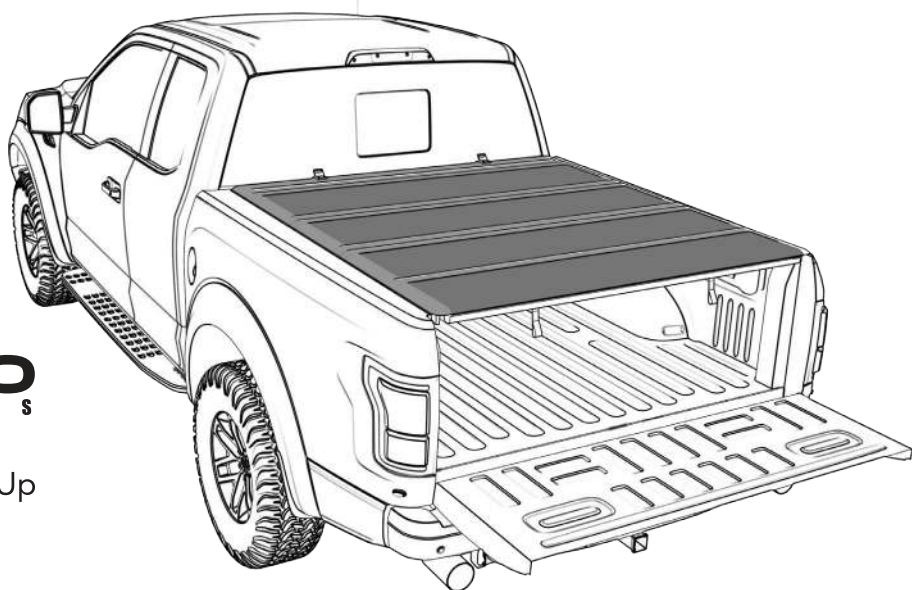

QUADAXIS PRO
SERIES

Low Profile Aluminum Quad-Fold Flip-Up
Tonneau Cover

Content

Tool Kit List	2
Exploded View	2
Installation Guide	3-6
Operating Instructions	6
Special Clamps Installation Guide	7

For your records

Date Purchased: _____

Serial Number: _____

ANNOUNCEMENT



Please verify vehicle fitment and truck bed size prior to installation.



Thoroughly clean the truck bed rails and surrounding surfaces before installation.



Inspect the package, cover, and all accessories immediately upon delivery.



Do not place heavy objects on top of the cover.



Do not stand, sit, or jump on the cover.




Carefully read and follow the installation manual. Improper installation or misuse may void liability coverage.




Avoid using hard, sharp, or abrasive tools and materials when cleaning the cover.

REQUIRED INSTALLATION TOOLS & COMPONENTS

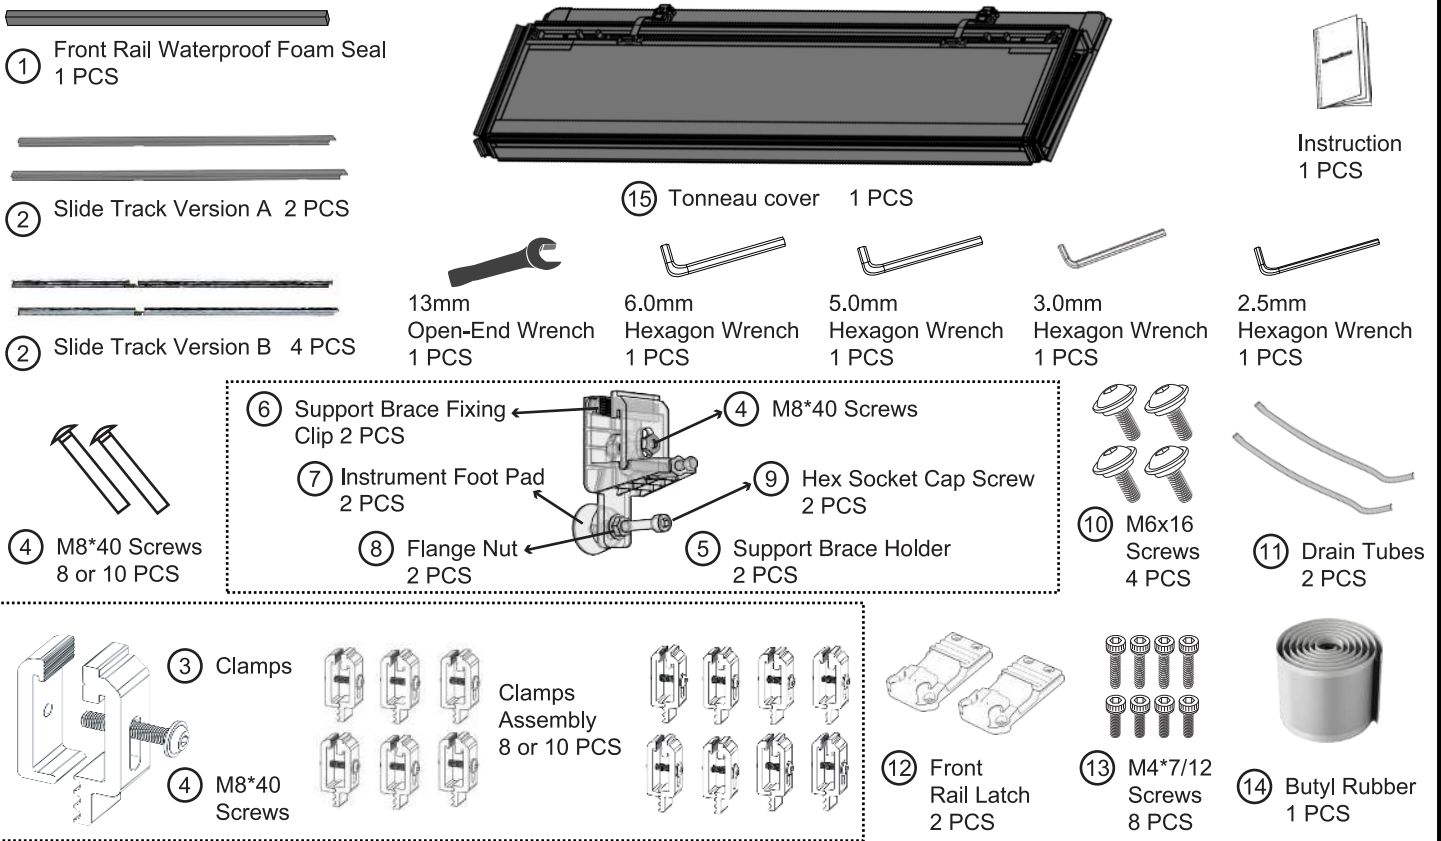

EXPLODED PARTS DIAGRAM

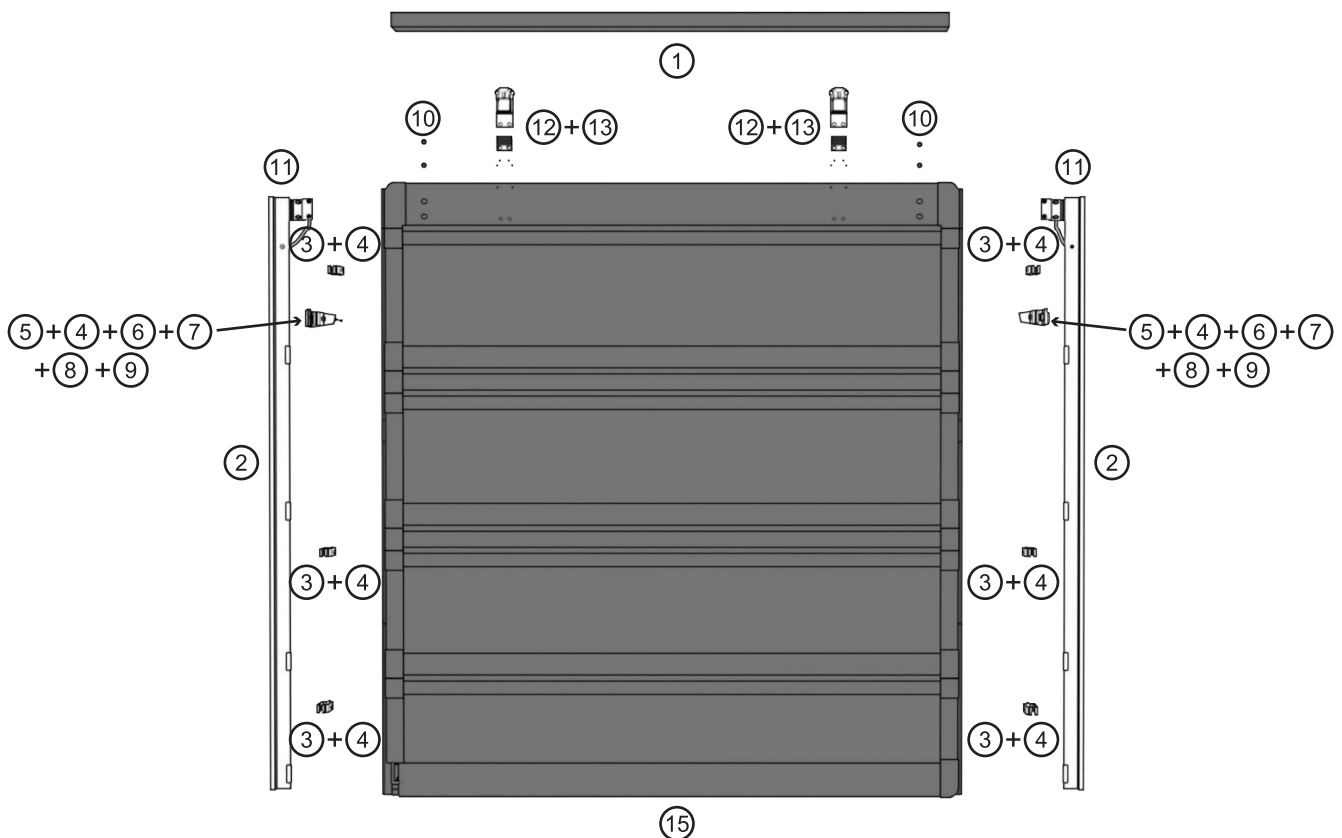


INSTALL THE SLIDE RAILS

1 Install the front cross member seal.



Note:
For models with lower
front cross member.

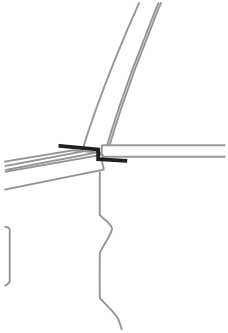


Installation Steps:

1.1



Peel backing paper.

1.2

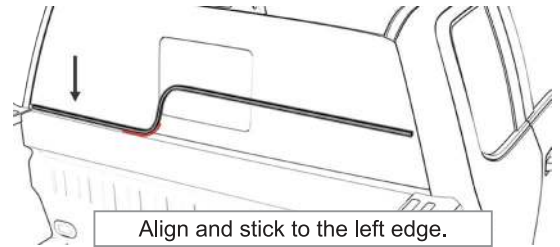


Align and stick to the left edge.

1.3



Apply seal along the cross member.

1.4

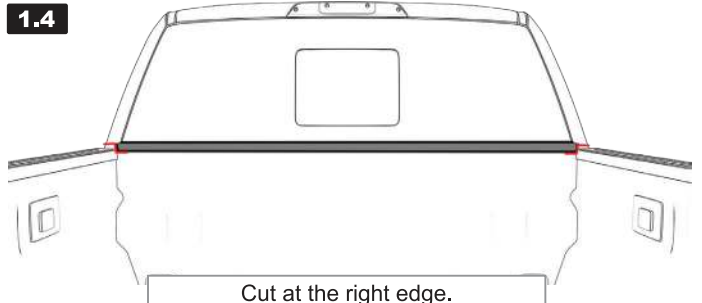

Cut at the right edge.


2 Install the slide track.



Note:
All-in-one models:
Skip to Step 3

Installation Steps:

Connect the A / B part

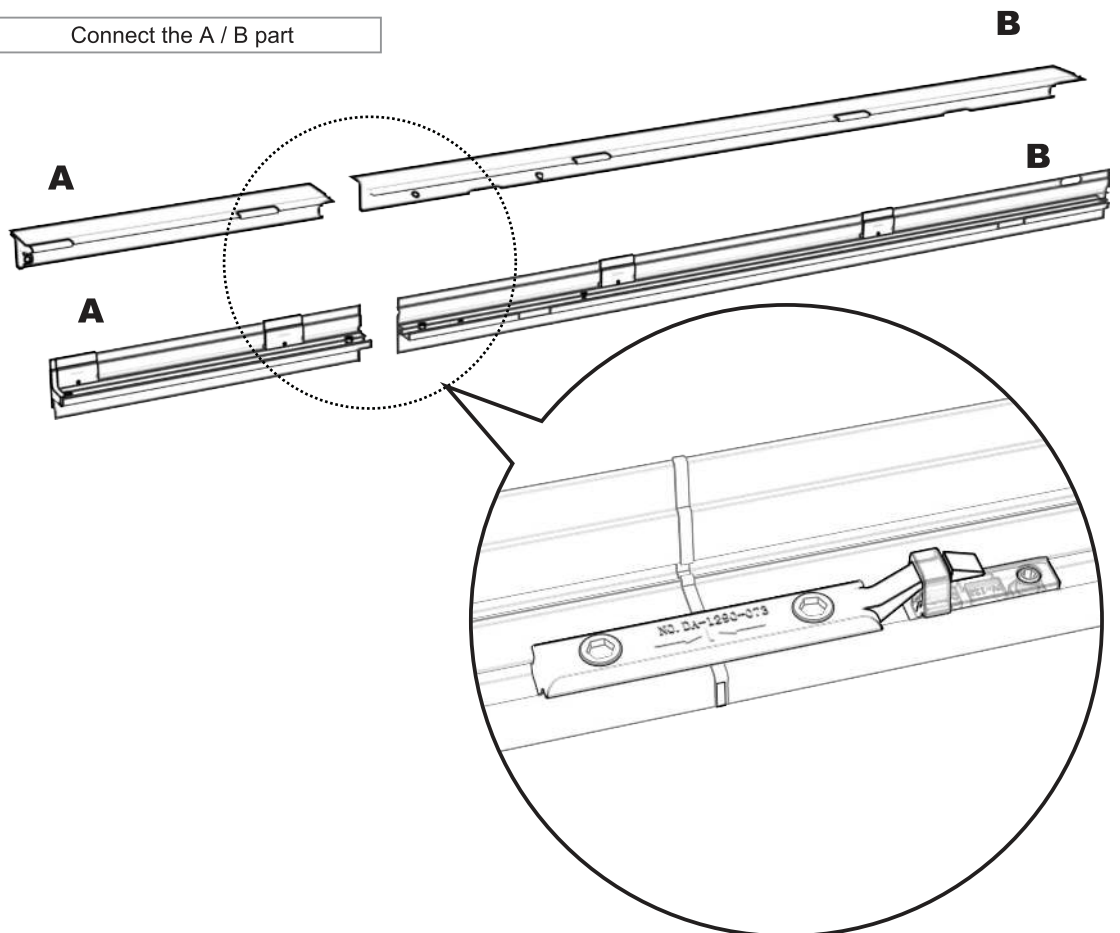

3


Install the Side Rails onto the Truck Bed.



Note:


1/ Ensure tracks vertical & flush with inner edges.

2/ Pay attention to the arrow tag .

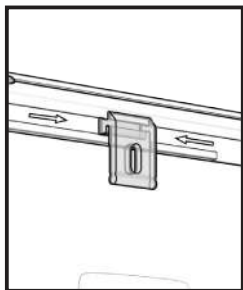


Installation Steps:

3.1

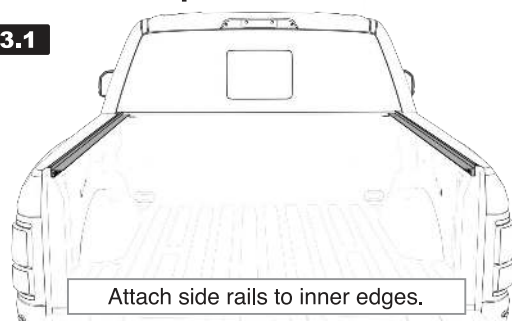


Attach side rails to inner edges.

3.2

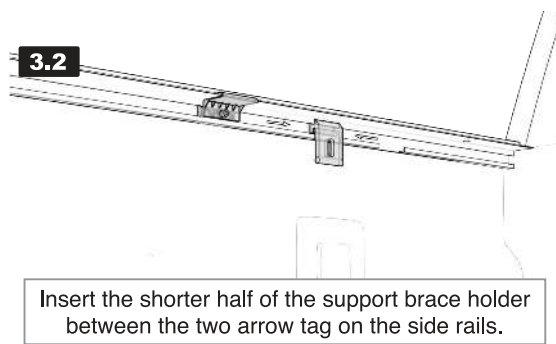

Insert the shorter half of the support brace holder between the two arrow tag on the side rails.

3.3

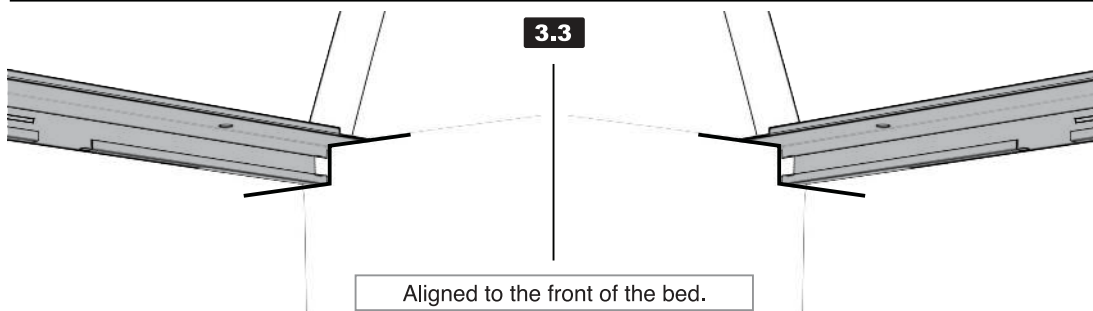

Aligned to the front of the bed.



4

Install the clamp.




Note:

Fit side track flush to side rail without gaps.

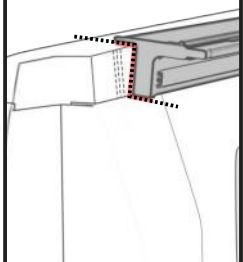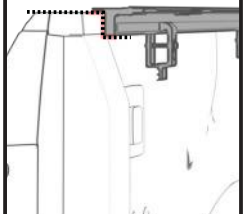


Installation Steps:

4.1

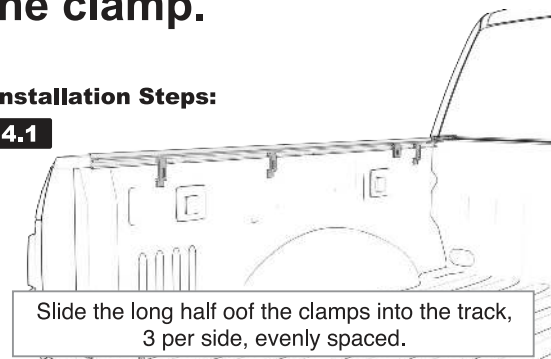


Slide the long half oof the clamps into the track, 3 per side, evenly spaced.

4.2

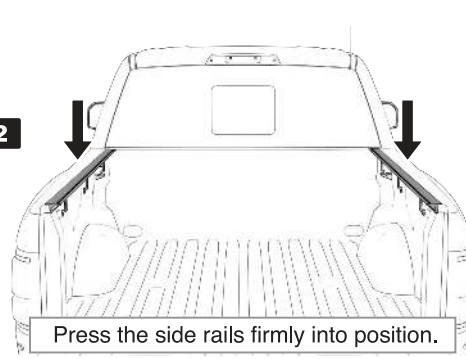


Press the side rails firmly into position.

4.3

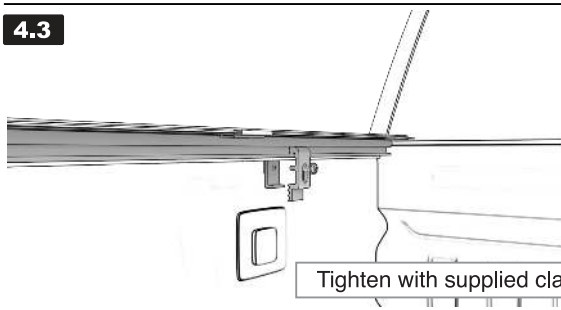


Tighten with supplied clamps, screws and wrench.


4.4

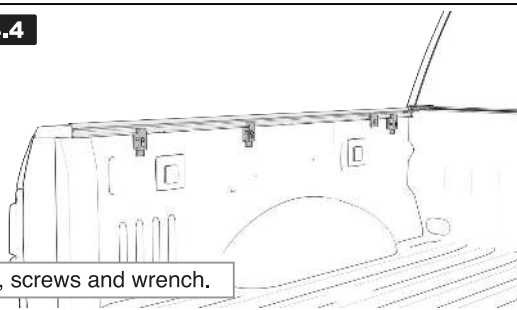

4.5

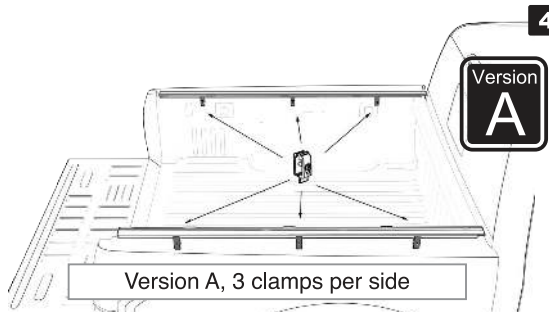

Version A, 3 clamps per side

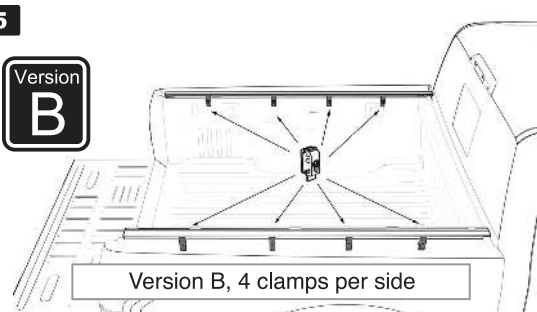

Version B, 4 clamps per side

Clamp quantity may vary by vehicle application.
Refer to the actual package contents.

5


Install support brace and support brace holder.



Ensure correct orientation according to the alignment markings.

Installation Steps:

5.1

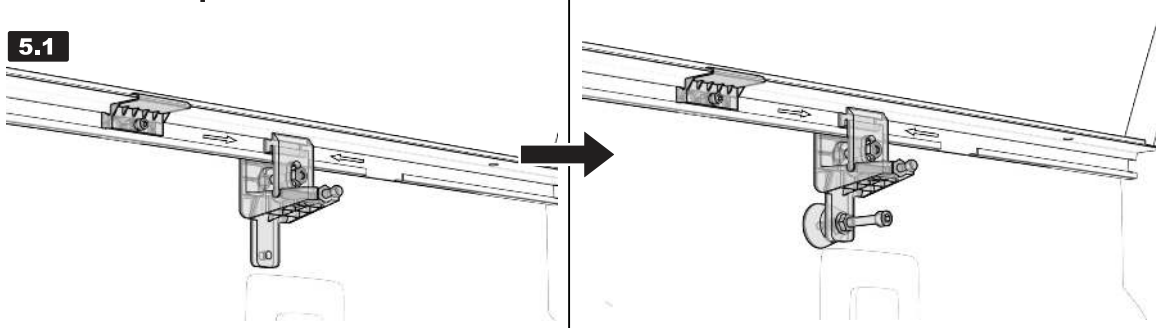


- ⑥ Support Brace Fixing Clip 2 PCS
- ⑦ Instrument Foot Pad 2 PCS
- ⑧ Flange Nut 2 PCS
- ④ M8*40 Screws
- ⑤ Support Brace Holder 2 PCS
- ⑨ Hex Socket Cap Screw 2 PCS

- First insert part ⑥ into the long section of part ⑤.
- Then align the long and short sections of part ⑤.
- Next install part ④, followed by parts ⑧ and ⑨.
- Install part ⑦ lastly when positioning close to the truck bed inner wall.




5.2 Use special support rod holder for truck beds with factory-installed rails.

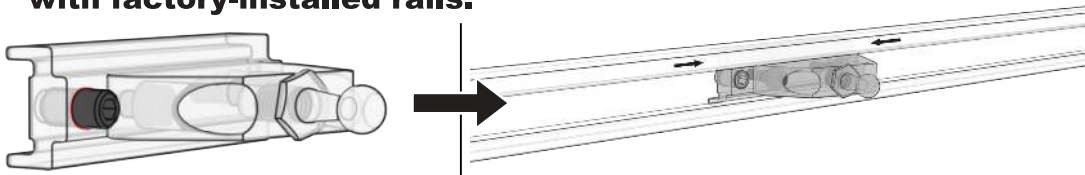

Slide the special support rod holder between the two arrows, then tighten the screws.

Ensure the support holder is oriented as shown.

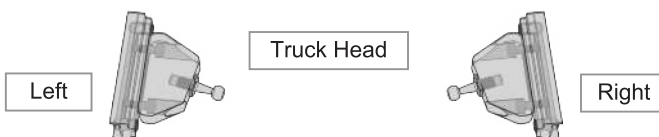

6

Install the drain tubes.




Note:
Insert the other end into the drain hole of the truck bed.

Installation Steps:

6.1



6.2

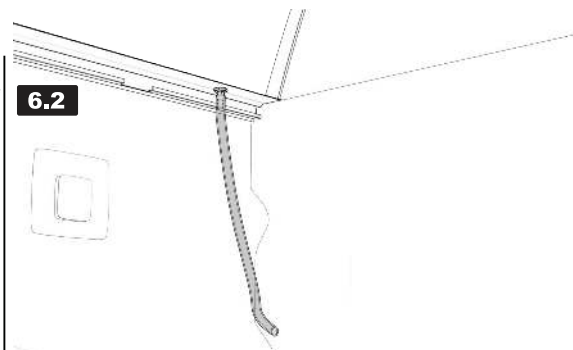

Align the drain tube with the drain connector, then push firmly all the way to the bottom.

7

Install the tonneau cover.



Note:

1/ Avoid damage:
install with two people.



2/ Make sure to fully
tighten the M6x16
front rail screws with
an Allen wrench to
prevent the cover from
loosening or falling off.

3/ Align holes by
adjusting slotted hole
bolts.


Installation Steps:

7.1




Position cover onto bed; align latch
with first front beam guard block.

7.2

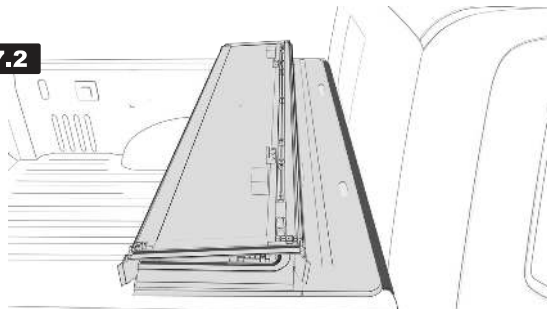


Put down the cover, Flip the front rail weather
strip onto the surface of the front beam.

7.3

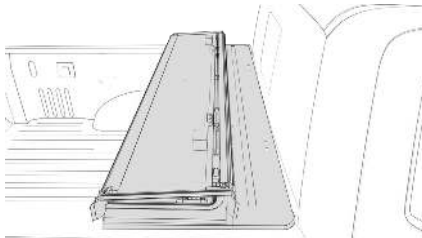


Align the holes on the front bar with those on the rail.

7.4

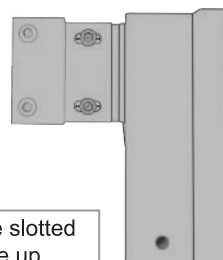


Adjust the bolts in the slotted
holes if they fail to line up.

7.5

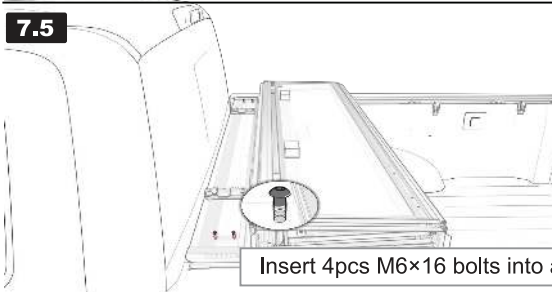


Insert 4pcs M6x16 bolts into aligned holes, then tighten them.

7.6

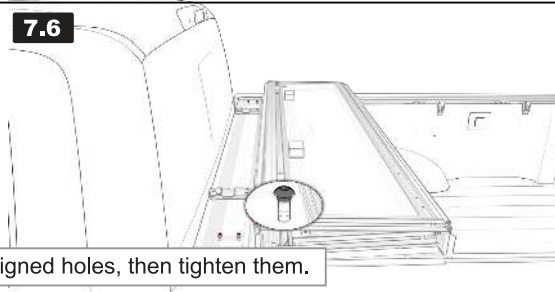


7.7

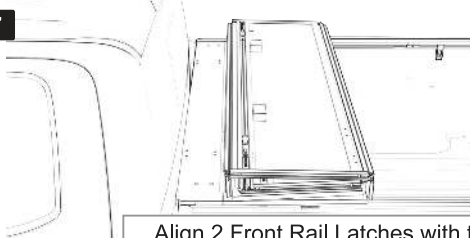

Align 2 Front Rail Latches with the corresponding holes on the front rail,
insert 4pcs M4*7/12 screws respectively, then tighten them.

7.8

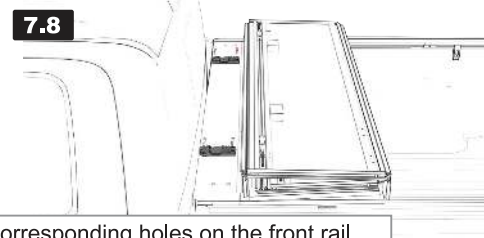

8

Instructions for Rubber Filler.



Note:


For exposed gaps
only. Not suitable for
other locations.

Installation Steps:

8.1



8.2

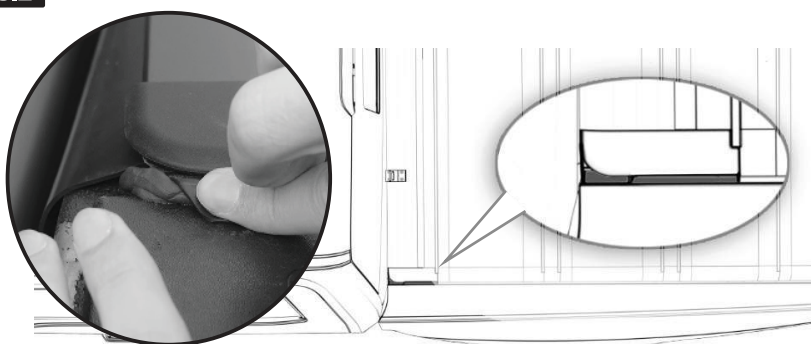


9 Operating Instructions.



1/ Ensure the cover is fully latched and locked before driving.

2/ When removing the support rod, move the circlip to the top end first, then rotate it to fit closely against the truck bed cover.

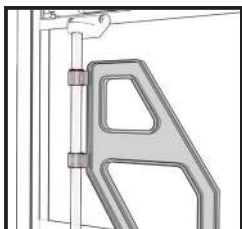


Truck Bed Cover Operating Steps:


9.1




9.2

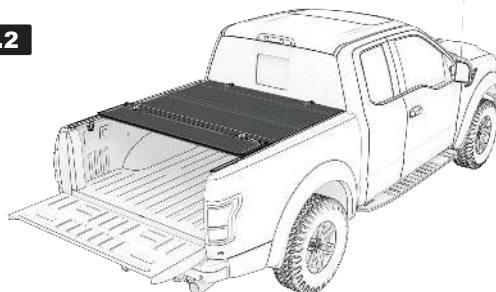


9.3

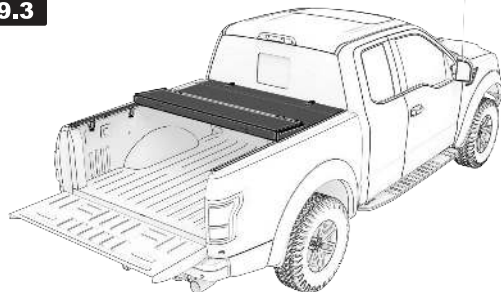


9.4

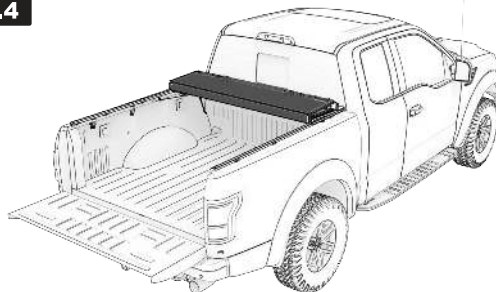

9.5

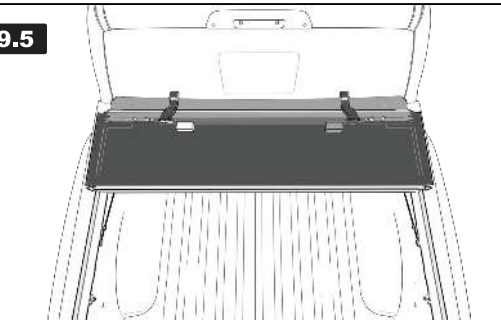


9.6

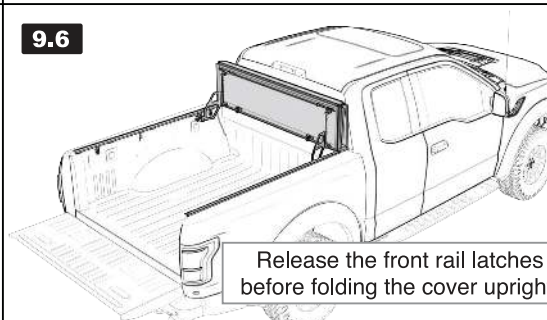


Release the front rail latches before folding the cover upright.

Support Rod Operating Steps::

Squeeze the upper and lower pressing blocks on the support rod lock head to unlock. Do the opposite to lock.

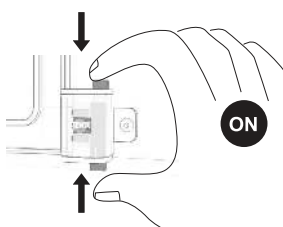


ON

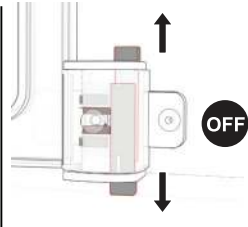


OFF


S.1

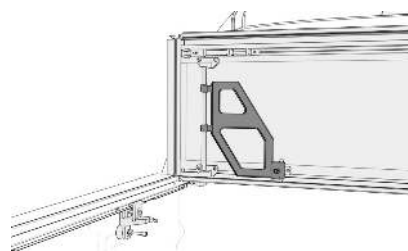

S.2

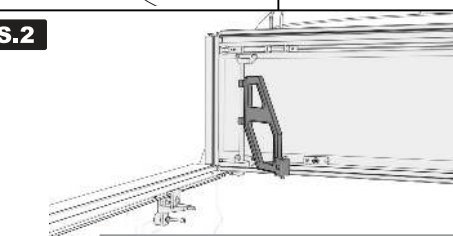


S.3

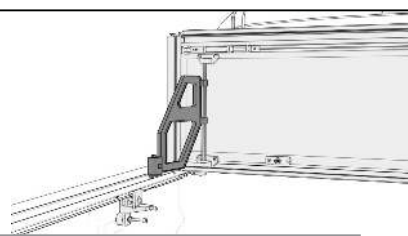


Fasten the lock catch onto the spherical head of the Support Rod Holder to fix it in place.

S.4

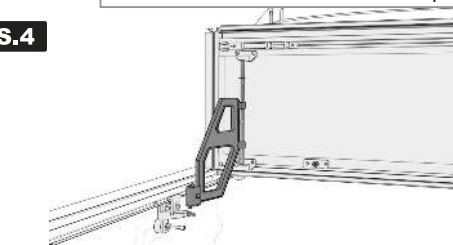

S.5

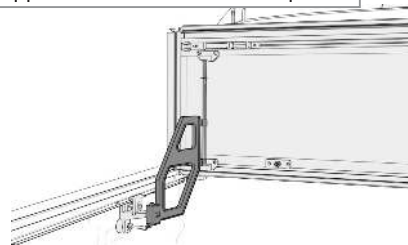




Special Clamps Installation Guide

A

Toyota Tacoma Clamps Installation

Fitment

151153
151160
151290
151306



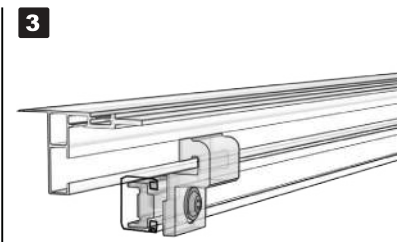
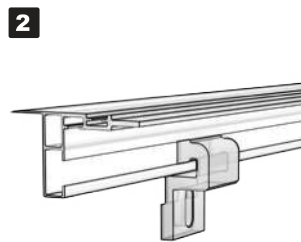
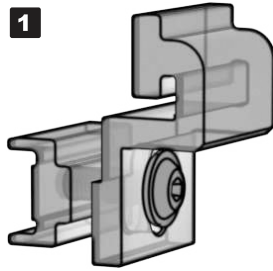


B

Chevrolet Stake Pocket Strike Plate Installation

Fitment

151054
151061
151092
151108

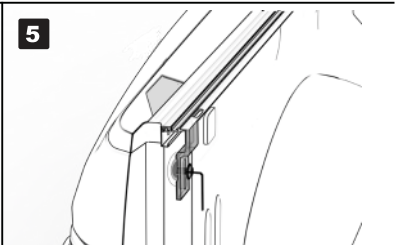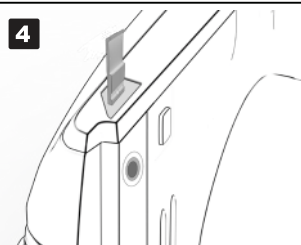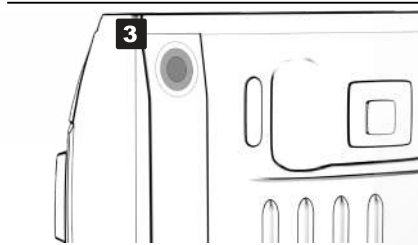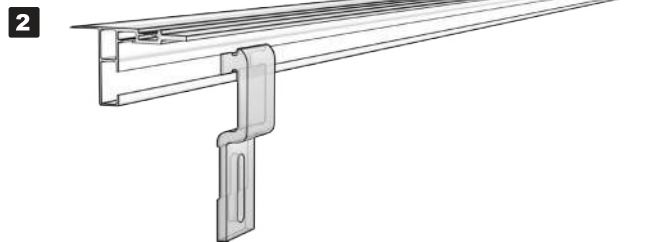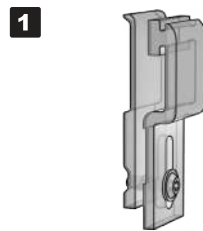

C




Toyota Tundra / Jeep Gladiator Clamps Installation

Fitment

151177
151184
151191
151207
151221

Fitment

151238
151245

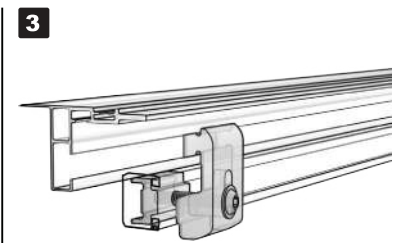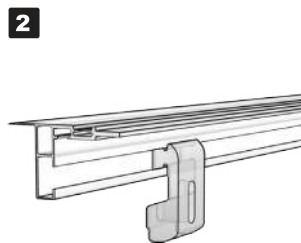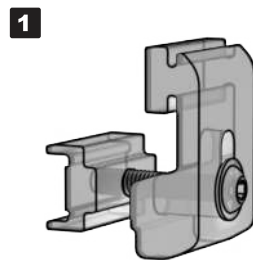

D

Nissan Frontier Clamps Installation

Fitment

151276
151283

